



Notes:
 "Door is closed" should be open if door halfway. Is required.
 "Magnetic vehicle detector" is optional.
 "Electric door strike" should not be labeled "12-24V".
 It always need a diode. Check polarity.
 All 230V outputs are max 5 A resistive load each.
 All wires should be shielded.
 All yellow/green protective earths and shields should be grounded in both ends.

Door and light control installation with Box 1.



Kanard AB
 09-11-30

www.kanard.se